




KEYA®

TRONIC **PRO**



Multiuser mode

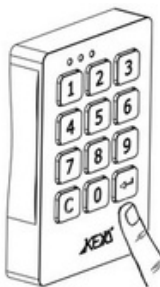

To close:



To open:



Open and close by 4-digit code. The code is erased every time the lock is opened, being available for a new use.

Single User mode



To open:




To close:

The latch closes automatically after 2 seconds.
 Note: the lock is provided with a metal latch holder that allows to close the door just by pushing it. (slam door system)


Open and close by 4-digit code. The code is set for 1 user only.

Change the User code

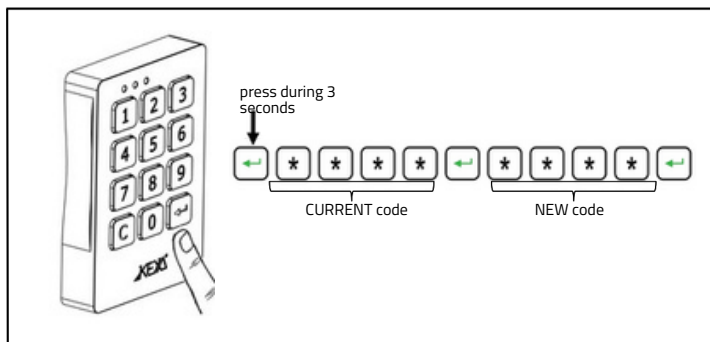

Press Enter during 3 seconds.
Introduce Current code and press Enter.
Introduce New code and press Enter.

Open using Master code: Inspection mode / Delete User code

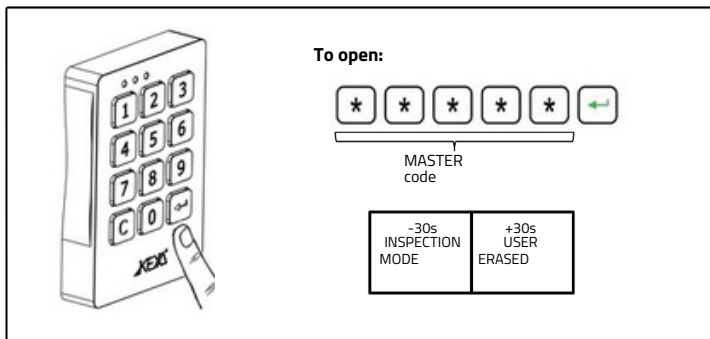

INSPECTION MODE
Introduce the 5 digit Master code and press Enter
Close the lock by pressing Enter before 30s.
The User code is not deleted.

DELETE USER CODE
Introduce Master code and press Enter.
After 30s the lock remains opened.
The user code has been deleted and a new
User code will be required to close the lock
again.

Change the Master code




press during 3 seconds



Press Enter during 3 seconds.
Introduce Current master code and press Enter.
Introduce New master code and press Enter.

Open using electronic Master key: Inspection mode/ Delete User code

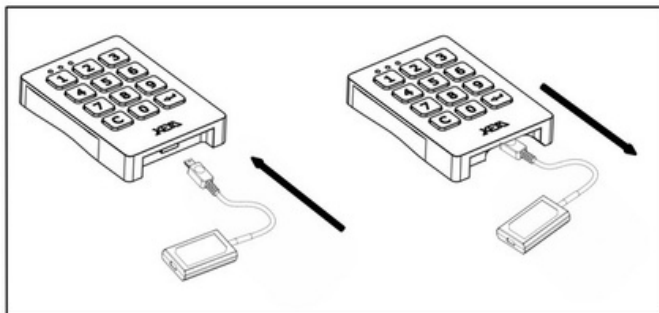

INSPECTION MODE

Connect the Master key (BLUE)
Lock opens
Remove electronic key
Press enter before 30 seconds
User code is not deleted.

DELETE USER CODE

Connect the Master key (BLUE)
Lock opens
Remove electronic key
After 30 seconds the User code will be deleted.
A new User code will be required to close the lock again.

Programmable settings (management software and cable required)

AUTOMATIC OPENING TIME:

The lock will open automatically at the programmed time:

- hh : mm
- Mon, Tue, Wed, Thu, Fri, Sat, Sun
- Working days
- Two options: Leave door open
Close door again

ACOUSTIC SIGNAL VOLUME:

- High/Low/Off

LED INDICATION OF CLOSED POSITION:

- On/Off blinking red LED when locker is closed

CODES:


- User / Master

LAST EVENTS

BATTERY LEVEL

N° OF OPERATIONS

Settings key

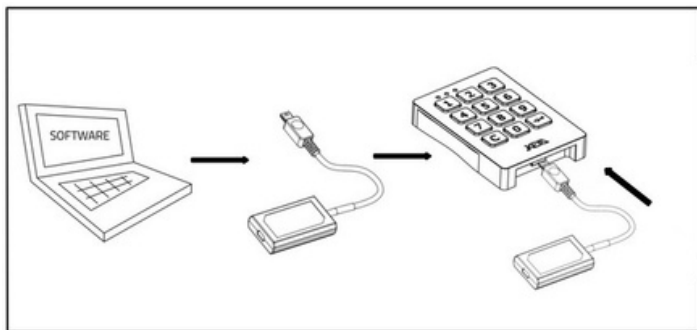


Load settings from the computer to the settings key (BLACK)

Connect settings key to the lock.


The settings will be automatically transferred to the lock.

Replacing batteries

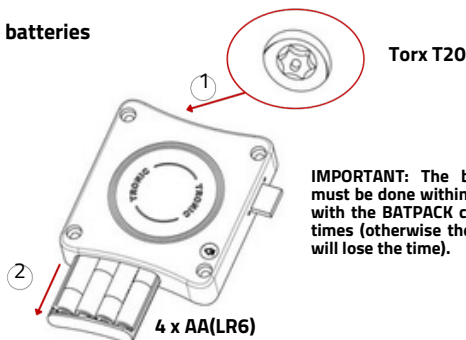

IMPORTANT: The battery change must be done within 5 minutes and with the BATPACK connected at all times (otherwise the internal clock will lose the time).

Measurements

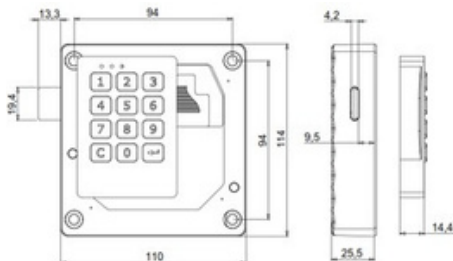

Technical specifications

IP (keypad / lock case)	---- / 42
Working temperature	-5°C < > +70°C
Latch force	> 45Kgf
UV Rays	> 10000h
Vibration	10 - 200 Hz Zg
Life test	> 200000 cycles
Electrostatic discharge	8000 V
Battery life	> 90000 cycles o three years



RoHS



Management System
ISO 9001:2008
www.tuv.com
ID: 3105066651

