

TRONIC **SLIM**


1
2
3
4
5
6
7
8
9
0
KEYA

1. LOCKING AND UN LOCKING

1.1Shared use mode

Operated with a 4-digit user code. Thecode is cleared when the lock is opened, leaving the locker ready for the next user.

1. 1

To lock:




On locking, a beep confirms and the Green LED lights up.

To unlock:



On unlocking, a beep confirms and the Green LED lights up.

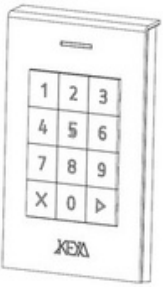

In case of error, three short beeps sound and the Red LED flashes three times. Theaudiblesignalsdescribedabovedonotapply when the Tronic SLIM is set to Silent mode.

1.2 Assigned use mod e

Operated with a single 4-digit user code. The pre-assigned code is retained for one user only.

1. 2

In Assigned use mode, the Tronic Slim stays locked.

To unlock:




On unlocking, a beep confirms and the Green LED lights up.

To lock:

Auto-locks after 2 seconds, or press 

On locking, a beep confirms and the Green LED lights up.

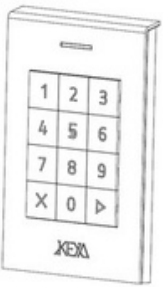



In case of error, three short beeps sound and the Red LED flashes three times. The audible signals described above do not apply when the Tronic SLIM is set to Silent mode.

2. CHANGING THE USER CODE

This function is only available in Assigned use mode.

In Shared use mode, an error is signalled at the end of the process: three short beeps and the Red LED flashes three times.

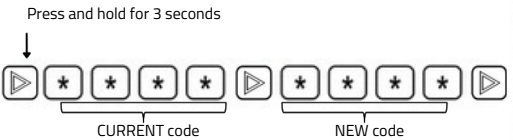


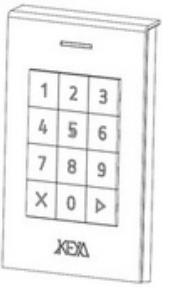


1- Press and hold for 3 seconds.
2- A beep confirms and the Green LED lights up.
3- Enter the CURRENT code while the Red LED is flashing.
4- Press a beep confirms and the Green LED lights up.
5- Enter the NEW code while the Red LED is flashing.
6- Press a beep confirms and the Green LED lights up.

In case of error, three short beeps sound and the Red LED flashes three times.
The audible signals described above do not apply when the Tronic SLIM is set to Silent mode.

3. OPENING WITH THE MASTER C ODE

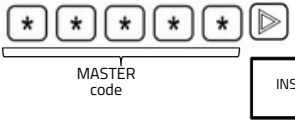

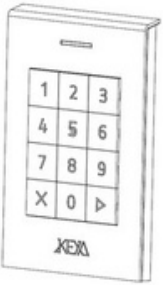


INSPECTION MODE: user code is retained.
1- Enter the 5-digit Master code .
2- A beep confirms, the Green LED lights up and the lock opens.
3- Press within 5 seconds and the Tronic Slim relocks.


CLEAR USER CODE: user code is cleared.
1- Enter the 5-digit Master code and press .
2- A beep confirms and the Tronic Slim unlocks.
3- Wait 5 seconds until the 8-beep tone sounds and the Green LED flashes.
The Tronic Slim stays unlocked.

Incase of error, three short beeps sound and the Red LED flashes three times.
The audible signals described above do not apply when the Tronic SLIM is set to Silent mode.

4. CHANGING THE MASTER CO DE

Press and hold for 3 seconds



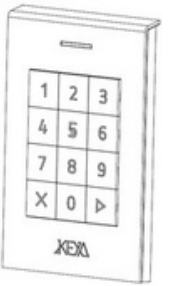

1- Press and hold ▷ for 3 seconds.
2- A beep confirms and the Green LED lights up.
3- Enter the CURRENT Master code while the Red LED is flashing.
4- Press ▷ a beep confirms and the Green LED lights up.
5- Enter the NEW Master code while the Red LED is flashing.
6- Press ▷ a beep confirms and the Green LED lights up.

Incaseoferror,threeshortbeepssoundandthe RedLED flashes three times.
Theaudiblesignalsdescribedabovedonotapply whenthe Tronic SLIM is set to Silent mode.

5. MASTER ELECTRONIC KEY



INSPECTION MODE: user code is retained.
1- Connect the Master key (Blue) to the Tronic SLIM.
2- The lock opens, 2 beeps sound and the Green LED flashes twice.
3- Disconnect the Master key (Blue).
4- Press ▷ within 5 seconds and the Tronic Slim relocks.

CLEAR USER CODE: user code is cleared.
1- Connect the Master key (Blue) to the Tronic SLIM.
2- A beep confirms and the Tronic Slim unlocks.
3- Disconnect the Master key (Blue).
4- Wait 5 seconds until the 8-beep tone sounds and the Green LED flashes.
5- Enter a new user code.

* Ask your KEYA sales representative for more information on the key and required accessories

In case of error, three short beeps sound and the Red LED flashes three times.
The audible signals described above do not apply when the Tronic SLIM is set to Silent mode.

6. CONFIGURABLE SETTINGS – KEYA CONTROL*

6

KEYA Control

KEYA Control App

Get it on Windows 10

GET IT ON Google Play

Automatic unlocking:
1-Limitedusetime:the lock opens once the set time has elapsed
2-Settime:thelockopens at the programmed time
-HH:MM,dayoftheweek / every day / Mon to Fri, leave the Tronic Slim open or locked

Volume:
High/Low:beepwhenpressing the number keys (0-9) and on confirmation or error.
Off:theGreenLEDlights up when pressing the number keys (0-9); LEDs flash for confirmation or error.

Locked status LED:
Enabled/Disabled:theRed LED flashes while the Tronic SLIM is locked

Codes:
User/Master:viewthecodes stored in the Tronic SLIM

Battery level

Number ofoperations

* Ask your KEYA sales representative for more information

7. PROGRAMMING KEY

7



Pre-configured keys:
1- Settings pre-configured at the factory*
2- Connect the key (Black) to the Tronic SLIM
3- The Tronic SLIM beeps twice and the Green LED flashes twice
4- Disconnect the key (Black) from the Tronic SLIM

Software-compatible:

1- Connect the key to the PC and run KEYA Control*
2- Change the settings with KEYA Control*
3- Key successfully configured.

* Ask your KEYA sales representative for more information on the key and required accessories

In case of error, three short beeps sound and the Red LED flashes three times.
The audible signals described above do not apply when the Tronic SLIM is set to Silent mode.

8 SPECIFICATIONS

8.1 Battery replacemen t

Warning!

Replace the batteries when the system signals Low Battery with three flashes of the Yellow LED. A Torx T20 bit is required to remove the screw located on the top of the lock. Batteries must be replaced within 5 minutes, with the BATPACK connected at all times (otherwise the internal clock will lose the time).



8.2 Technical specifications

IP rating (keypad/lock)	---/45
Operating temperature	-5°C < > +70°C
Bolt strength	> 45Kgf
UV resistance Vibration	> 10000h
Life cycle	10 - 200 Hz 2g
Electrostatic discharge	> 200,000 cycles
Batteries	8000 V
Battery life	x4 LR6/AA
	90,000 cycles or 3 years

RoHS

Sistema de Gestión ISO 9001:2015


100%
RECYCLABLE