KEYA®


UNLOCK INNOVATION

TRONIC **TOUCH PANEL**


tronic touch
1 2 3
4 5 6
7 8 9
0
KEYA

Shared use mode

1

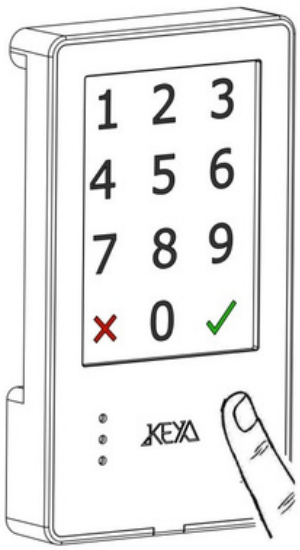

To lo ck:




To un lock:



Operate d with a 4- digit user code. The code is cleared every time the lock is opened, leaving the locker ready for the next user.

Assigned use mode

2

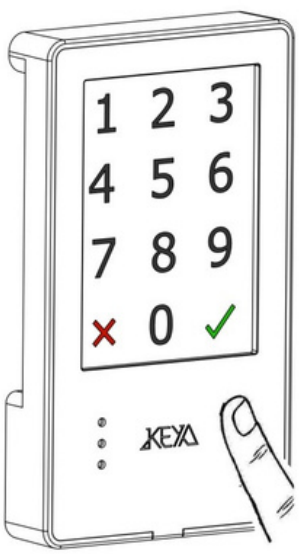

To un lock:




To lo ck:

Auto-locks after 2 seconds
.


Operated with a 4 - digit user code, assigned to a single user.

Changing the user code

3

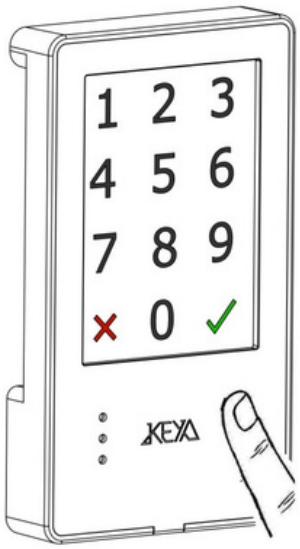


press a nd hold fo r 3 seconds

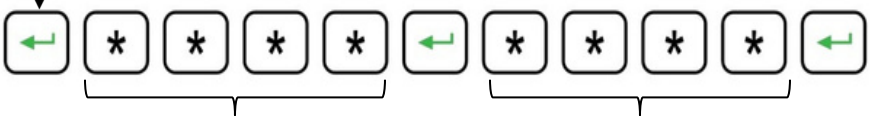


Press and hold Enter fo r 3 seconds.
Enter the current code and press Enter .
Enter the new code and press Enter.

Opening with the Master code: In spection mode / Clear user code

4

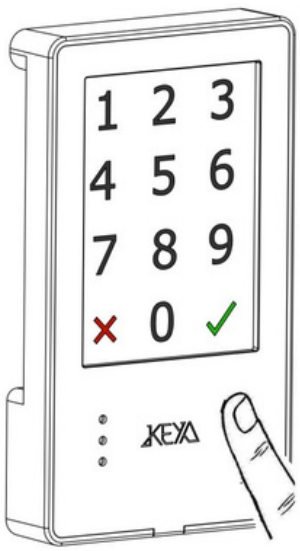

To un lock:

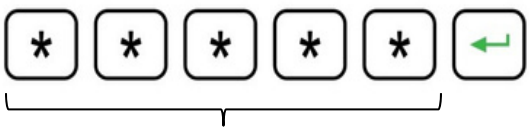


-30s INSPECTI ON MODE	+30s USER CODE CLEARED

INSPEC TION MODE
Enter the 5- digit M aster code
and press Enter.
Relock the lock by pressing Enter w ithin
30 seconds.
Th e user code is retained.

CLEAR USER CODE
Enter the Master code and press Enter.
After 30 seconds the lock remains open
and the user code is cleared.
A new user code will be required to lock
it a gain.

Changing the Master code


5

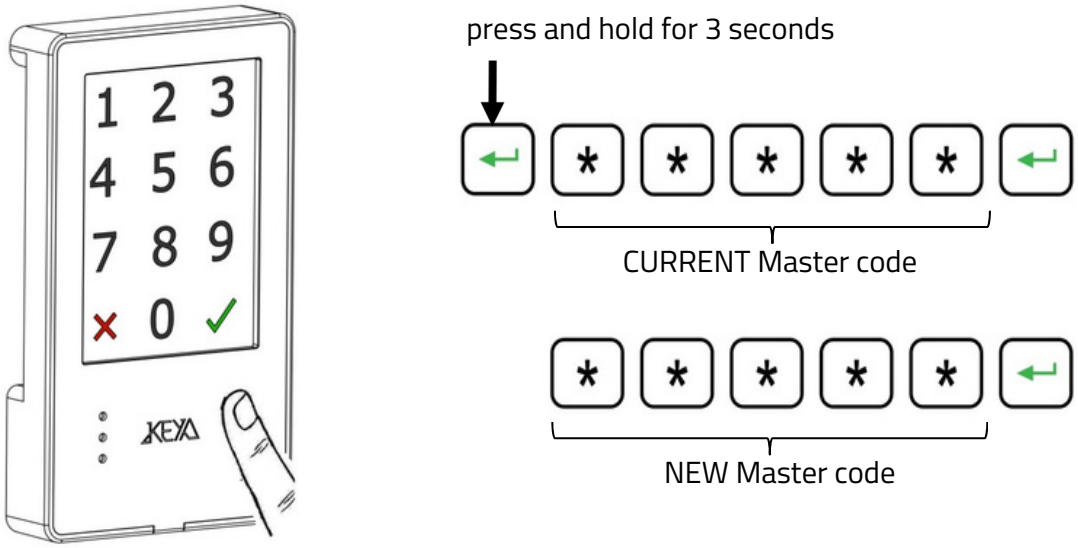

Press and hold Enter for 3 seconds.
Enter the current Master code and press Enter.
Enter the new Master code and press Enter.

Opening with the Master key: In spection mode / Clear user code

6

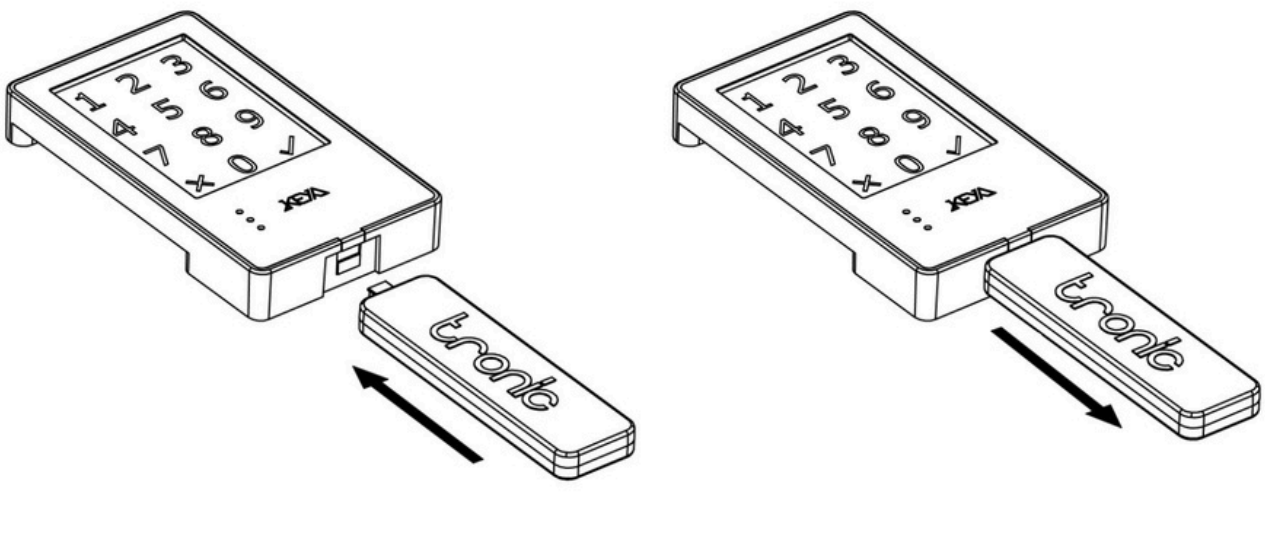

INSPECTION MODE

Connect the Master key (BLUE).
The lock opens .
Remove the electronic key.
Press Enter within 30 seconds.
The user codeisretained.

CLEAR USER CODE

Connect the Master key (BLUE).
The lock opens.
Remove the electronic key.
After 30 seconds the user code is cleared.
A new code will be required to lock it again.

Programmable settings (management software and cablere quired)

AUTOMATIC UNLOCK TIME:
The lock opens automatically at the programmed time:

- hh : mm
- Mon , Tue, Wed, Thu, Fri, Sat, Sun
- Working days
- Two options: Leave the door open. Relock the door .

BUZZER VOLUME :

- High/Low/Off

LOC KED STATUS LE D:

- Red LED flashing On/ Off when locked.


CODES:

- User / Master


AUDIT TRAIL
BATTERY LEVEL
NUMBER OF OPERATIONS

Programming key

7

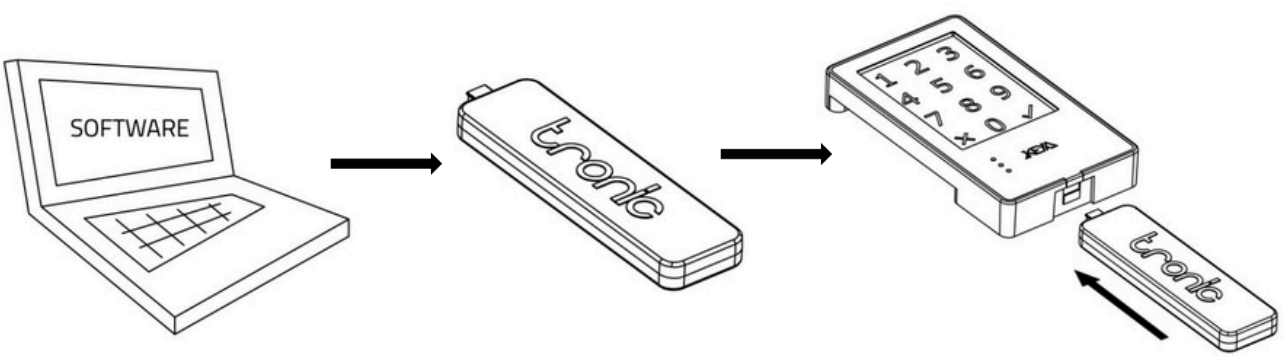


Upload the settings from the PC to the Programming key (BLACK).
Connect the Programming key to the lock.
The settings are transferred to the lock automatically.

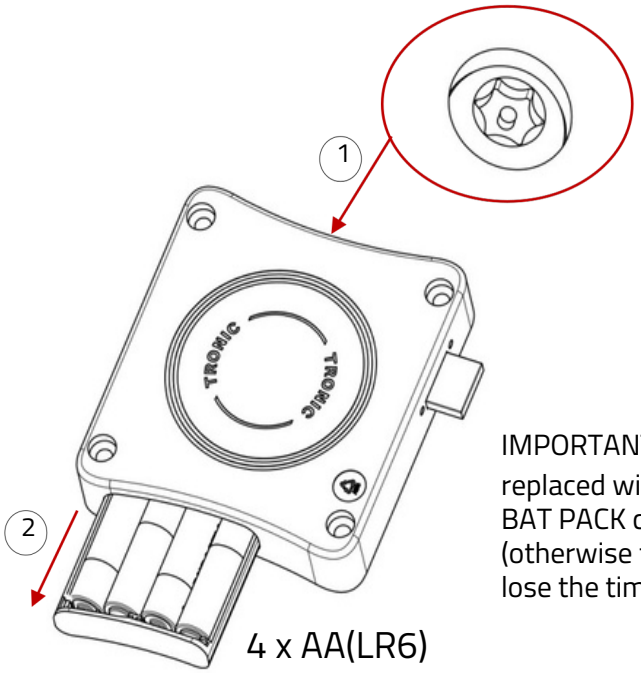

IMPORTANT: Batteries must be replaced with in 5 minutes, with the BAT PACK connected at all times (otherwise the internal clock will lose the time).

Overall dimensions

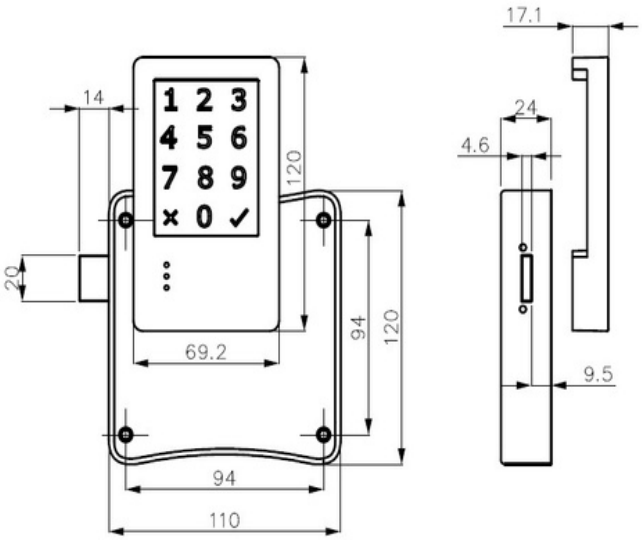

Technical specifications

Salt spray test	> 96h
Operating temperature	-5°C<>+70°C >
Bolt strength	45Kgf
UV resistance	> 10000h
Vibration	10 - 200Hz 2g
Life cycle	> 200,000 cycles
Electrostatic discharge	8000 V
Battery life	> 70,000 cycle s

WEEE Directive

RoHS

Management System ISO 9001:2008
TÜVRheinland CERTIFIED
www.tuv.com ID 9105066651