KEYA®

UNLOCK INNOVATION

User Manual
KEYA CONTROL APP
TRONIC PRO

CONTENTS

1. Installing and running the Keya Control App 3

2. Logging in 4

3. Connecting the TRONIC PRO lock to your smartphone 5

4. Keya Control App interface 6

5. Keya Control App home screen – TRONIC PRO 7

6. Keya Control App settings – TRONIC PRO 8

7. Keya Control App automatic unlocking – TRONIC PRO 9

8. Keya Control App codes – TRONIC PRO 10

1. Keya Control App installation and start-up guide

I. Download the app.

II. A shortcut is created automatically in the menu.

III. Open the app.

IV. The language is detected automatically.

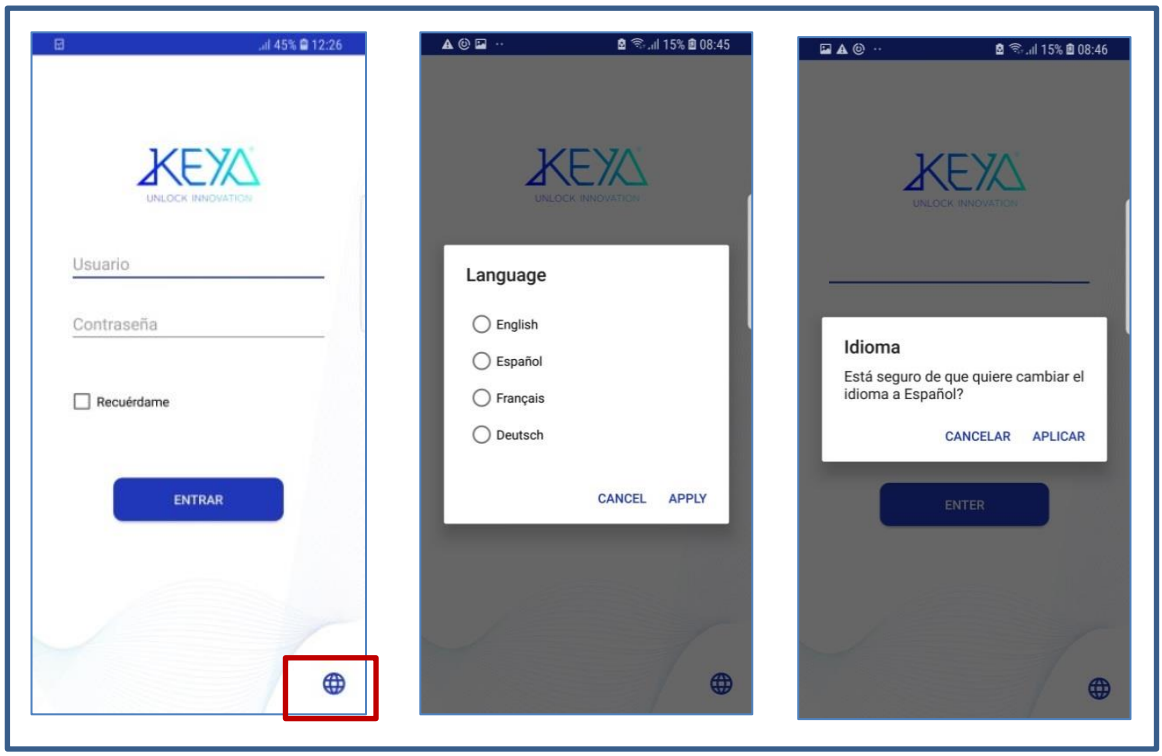


Figure 1: Changing the language

2. Logging in

I. Open the app and log in with the username and password supplied with your licence.

II. Create a new password (it must be longer than 4 digits and different from the previous one).

III. The first time you log in, enter the licence code you purchased.

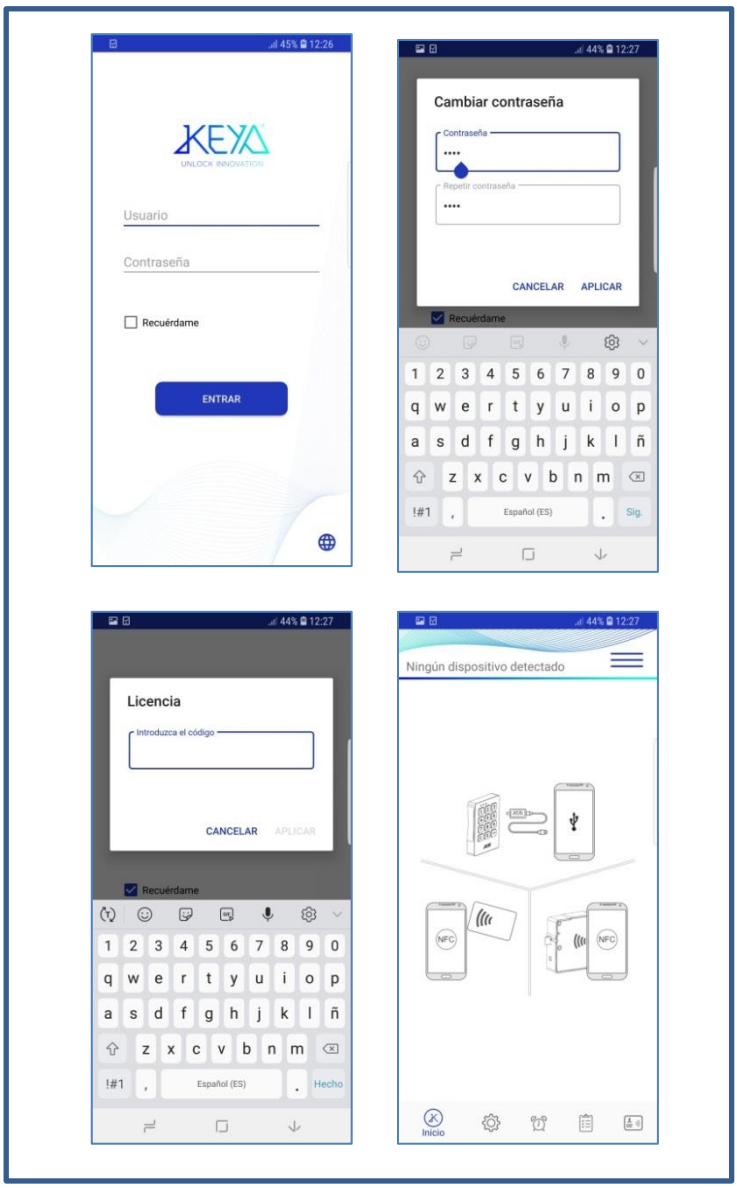


Figure 2: Login screen

3. Connecting the TRONIC PRO lock to your smartphone

I. With the app open, connect the TRONIC PRO to your smartphone using the communication key and mobile USB cable kit.

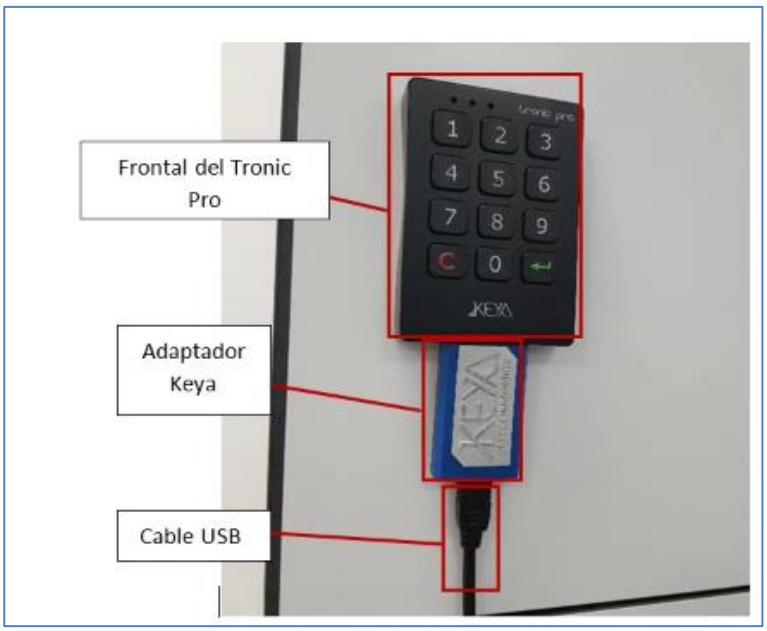


Figure 3: Connecting the cables to a lock

II. Allow the app to use your smartphone's USB adapter (see Figure 4).

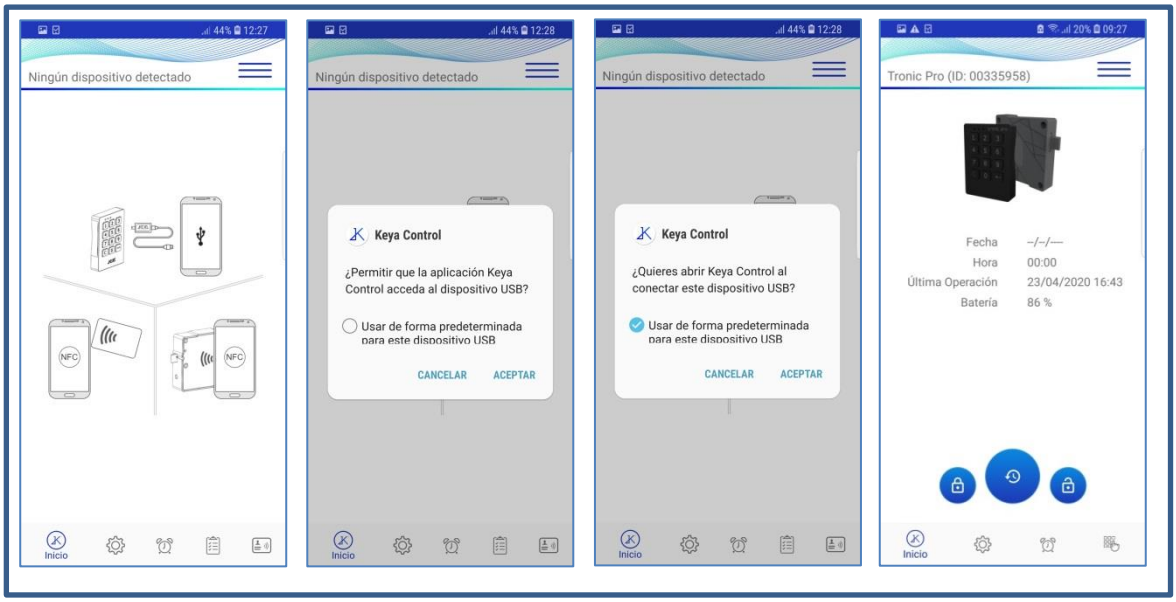


Figure 4: USB communication permissions

4. Keya Control App interface

You can open the user menu at any time by tapping the Options button at the top right or, if your smartphone supports it, by swiping from right to left across the screen (see Figure 5):

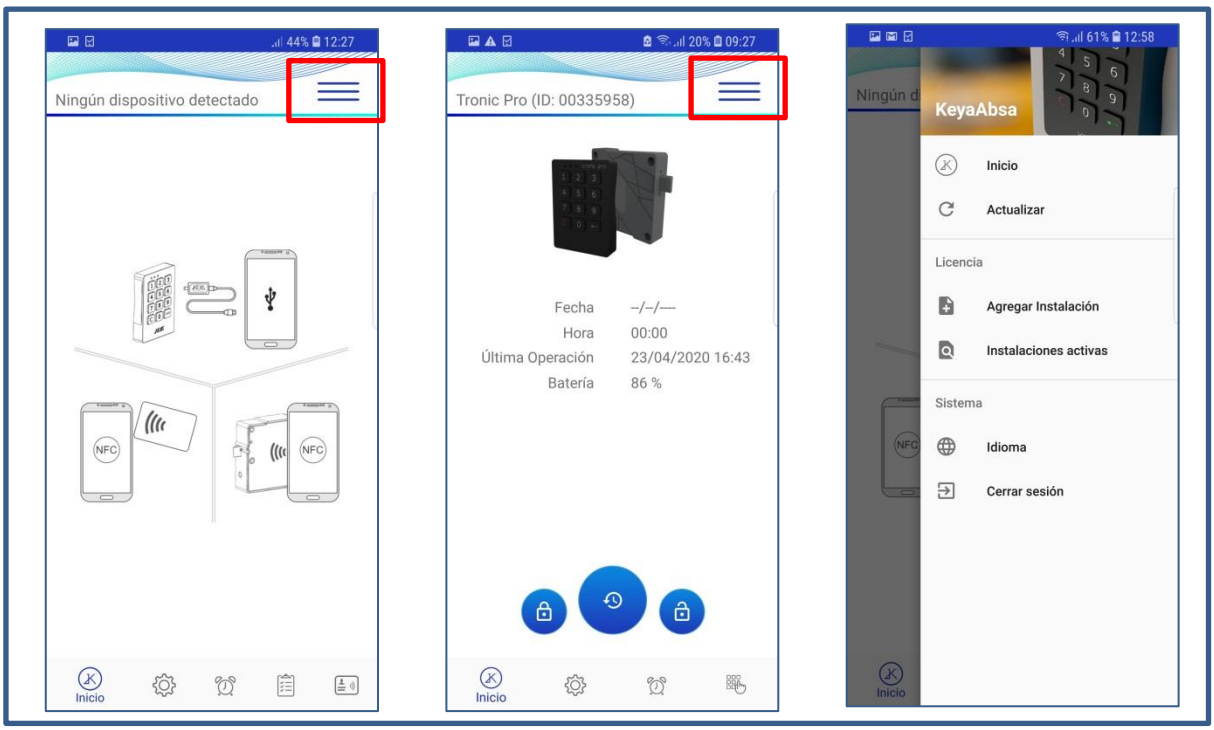


Figure 5: Keya Control App interface

Inicio	The Home button takes you to the app's home screen.
Actualizar	The Refresh button reloads the last action shown on screen (settings read, card read, etc.).
Agregar Instalación	Opens the Licences box to add new IDOFs and Customer IDs.
Instalaciones activas	Shows the active installations in the account.
Idioma	Changes the app language.
Cerrar sesión	Closes the app.

Table 1: Keya Control App options

5. Keya Control App home screen – TRONIC PRO



Figure 6: TRONIC PRO home screen

Date	Internal date of the lock.
Time	Internal time of the lock.
Last operation	Date of the last operation
Battery	Battery level (%).

Table 2: Lock data readout.

	Lock button: locks the TRONIC PRO.
	Sets the lock clock to the current time.
	Unlock button: unlocks the TRONIC PRO.

Table 3: Home screen buttons.

6. **Keya Control App settings – TRONIC PRO**



Figure 7: TRONIC PRO settings

Mode	Assigned use / Shared use.
Retries	Number of attempts allowed to enter the code.
Volume	Mute / Low / High.
Locked LED	Disabled / Enabled.
Time zone	No zone / EU / USA / Mexico / Australia / New Zealand.
Lockout	Lockout time applied once the maximum number of retries is reached.
Assigned auto-lock	In Assigned use mode, the lock relocks automatically after the set number of seconds.
Inspection time	How long the lock stays open during the inspection process.

Table 4: TRONIC PRO settings.

7. Keya Control App automatic unlocking – TRONIC PRO

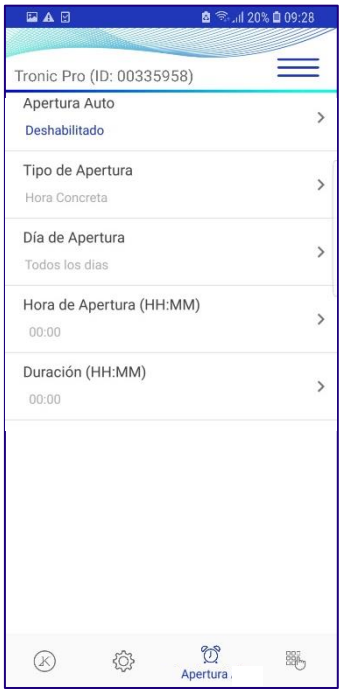


Figure 8: TRONIC PRO automatic unlocking

To enable automatic unlocking:

I. Enable the Auto unlock option.

II. If the lock allows it, select the Opening type.

III. Select the day(s) on which the lock should open.

IV. Enter the opening time in Opening time (HH:MM) and how long the lock should stay open in Duration (HH:MM).

Finally, we recommend checking the lock's current time to avoid problems. After each change to the automatic unlocking settings, update the lock clock with the Set time button on the home screen.

Auto unlock	Automatic unlocking: Disabled / Enabled
Opening type	Set time. Can be changed with the required permissions.
Opening day	Monday/Tuesday/Wednesday/Thursday/Friday/Saturday/Sunday/ Every day/Working days only
Opening time (HH:MM)	Time at which the lock opens.
Duration (HH:MM)	How long the lock stays open. If “0 hours” and “0 minutes” are set, the lock remains open.

Table 5: Automatic unlocking settings.

8. Keya Control App codes – TRONIC PRO



Figure 9: TRONIC PRO code settings

User code	Code used to unlock the lock.
Master code	Master code used to reset the user settings.

Table 6: Lock codes.

ENG – Rev1